


Partes del Siscom

1. Conector Antena
2. Porta SIM "SIM habilitada para NB-IoT"
3. Módulo wifi
4. Entradas y salidas
5. Alimentación principal
6. Conector RJ45
7. Alimentación secundaria
8. Puerto de comunicaciones
9. LTE
10. LAN
11. COM

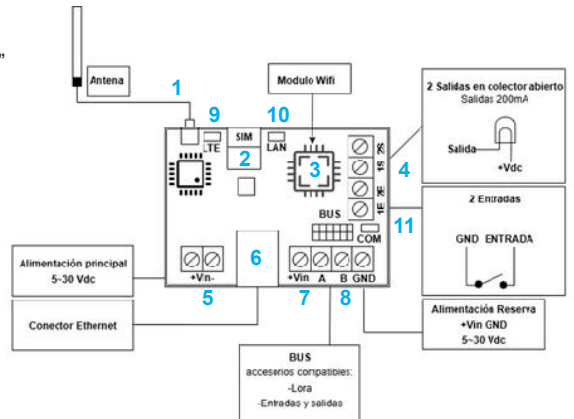

Leds de estado

- En **verde** intermitencia rápida el estado es correcto
- En **rojo** intermitencia rápida estado con problemas

Conexión de la central




- Conectar alimentación principal del equipo a la salida auxiliar de 30V de la central.
- Conectar A y B SisCom al A y B de la central.

Siscom Cloud



Registro empresa: para gestionar los equipos, instaladores y usuarios.

Registrarse: la cuenta empresa asociara como instalador o usuario.

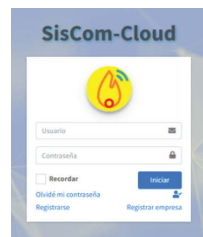


Descárguese el manual completo a través del QR



Siscom parts

1. Antenna Connector
2. SIM holder "NB-IoT enable SIM"
3. WiFi module
4. Entrances and exits
5. Main power supply
6. RJ45 connector
7. Backup power supply
8. Communications port
9. LTE
10. LAN
11. COM

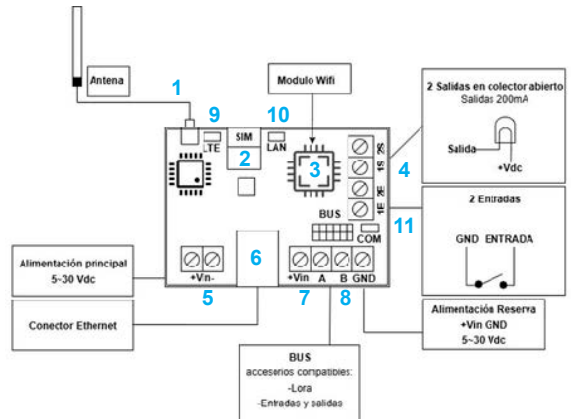

Status leds

- The fast flashing **green** status is correct
- Flashing **red** rapidly, in a state of problems

Central connection



Connect the main power supply of the equipment to the 30V auxiliary output of the control unit.

Connect A and B SisCom to the A and B of the central unit

Siscom Cloud



Company registration: to manage equipment, installers, and users.

Register: the company account will be associated as an installer or user.



Easily download the complete manual using this QR code link.

