

JBE-P2L1 - Guía de inicio rápido

Contenidos Online

Enlace para registrarse en la página web para acceder a los contenidos Online. jadebird.eu.com	
---	---

Documentación

Enlace para acceder a la documentación y los vídeos de formación Online. jadebird.eu.com/support/	
---	---

Instalación

- Programar una dirección a cada dispositivo dentro del mismo lazo (@1 a @200). - Alimentar a 24V DC los dispositivos que lo requieran (por ejemplo, sirenas).

Niveles de acceso y contraseñas

- Nivel 2 de acceso de usuario: 111 - Nivel 3 de acceso de usuario: 111111111
--

Configuración

Seleccionar el idioma del equipo en caso de que sea necesario. - [F5] (Instalación) + [4] (Idioma) + 111111111 +  (Confirmar) - Selecciona idioma [1], [2], [3] o [4] +  (Confirmar) + (Salir)
Ejecutar el “Asistente paso a paso”. - [F5] (Instalación) + [1] (Asistente paso a paso) + 111111111 +  (Confirmar) - [1] (Instalación paso a paso) + 1 (Auto-registrar dispositivos) +  (Confirmar)

Configuración Avanzada

Por defecto las sirenas se configuran en el “Grupo 3” (1er grupo libre). Para que suenen automáticamente hay que mover las sirenas al “Grupo 1” (Sirenas). - [F4] (Ajustes) + [6] (Asignar salida o sirena a grupo de salidas) + 111111111 +  (Confirmar) - Localizar “Lazo” y “Dir.” y “Asignar” a “Grupo 1” (001) +  (Confirmar)
--

Herramienta de Configuración Online

Todas las configuraciones del panel Draco JBE-P2L1 se pueden realizar desde su intuitiva interfaz de usuario. No obstante, Usted también puede crear, editar o almacenar configuraciones registrándose en nuestro portal Web. La carga o descarga de configuraciones de y hacia el panel se realiza mediante una memoria USB. jadebird.eu.com/configtool/	
--	---

JBE-P2L1 - QuickStart Guide

Online content

Link to sign in on the website to access Online content. jadebird.eu.com	 SCAN ME
--	--

Documentation

Link to access to the documentation and Online training videos jadebird.eu.com/support/	 SCAN ME
--	--

Installation

- Program one address for each device within the same loop (@ 1 to @ 200). - Supply 24V DC devices that require it (for example, sirens).
--

Access Levels and Passwords

- User access level 2: 111 - User access level 3: 1111111111

Configuration

Select the language of the equipment if need it. - [F5] (Install) + [4] (Set language) + 111111111 + ✓ (Confirm) - Choice language [1], [2], [3] ó [4] + ✓ (Confirm) + (Exit)
Run the "Wizard". - [F5] (Install) + [1] (Wizard) + 111111111 + ✓ (Confirm) - [1] (Install wizard) + 1 (Auto-Registration) + ✓ (Confirm)

Advance Configuration

As default the sounders are defined in "Group 3" (1st free group). In order to sound automatically, the sounders must be moved to "Group 1" (Sounders). - [F4] (Adjust) + [6] (Assign output to activation group) + 111111111 + ✓ (Confirm) - Locate "Loop" and "Addr" and "Set" to "Group 1" (001) + ✓ (Confirm)

Online Configuration Tool

All JBE-P2L1 Draco panel configurations can be done thanks to its intuitive user interface. However, you can also create, edit or store your own configuration by registering on our Web site. Loading or downloading settings to and from the panel can be done using an USB. jadebird.eu.com/configtool/	 SCAN ME
--	--